

# **HONDA**

**ARBOL DE LEVAS**  
**CAMSHAFT**  
**ARBRE A CAMES**  
**NOCKENWELLE**  
**COMANDO VALVULAS**  
**РАСПРЕДЕЛИТЕЛЬНЫЙ ВАЛ**  
**凸轮传动轴**



- 2 -

# HONDA

[illegible]

# HONDA

		Ordenado por Sorted by Ordre selon ↓ c.c.	(CV) (HP)						REF.	NOTAS Notes Notes	
					→	←					
1	CIVIC CVCC CIVIC CVCC (SOHC)	1343 1343	75 90	D13B1 D13B2	1987 1987	1990 1990	75 75				439
2	CIVIC SHUTTLE CONCERTO (SOHC)	1493 1493	90 90	D15B2 D15B2	1980 1990	1990 1995	75 75			(MANUAL)	439
										(AUTOMATIC)	439
3	CIVIC CVCC CIVIC VTEC (SOHC)	1493 1493	100 89	D15B1 D15B2	1988 1992	1995 1996	75 75			(CIVIC CVCC)	439
										(CIVIC CVCC)(SUIZA)	439
										(CIVIC VTEC)	439
4	CIVIC CVCC (SOHC)	1493	100	D15B2	1988	1995	75			(MANUAL) (<1991)	439
										(AUTOMATIC) (<1991) (MANUAL-AUTOMATIC) (1991>)	439
5	CRX (SOHC)	1590	110	D16A7	1988	1991	75				439

◀ = Lado izquierdo - Left side - Cote gauche

▶ = Lado derecho - Right side - Cote droit

# HONDA

		Ordenado por Sorted by Ordre selon ↓ c.c.	(CV) (HP)							REF.	NOTAS Notes Notes	 mm
					→	←						
6 	CIVIC 16V (SOHC)	1590	110	D16A7	1988	1991	75			93082000	(CON KAT)	439
											(SIN KAT)	439
7 	CIVIC SHUTTLE CONCERTO CONCERTO (SOHC)	1590	108	D16Z2	1990	1991	75			93082000	(CONCERTO)(D16Z2)	439
		1590	106	D16Z1	1990	1993	75				(CONCERTO)(D16Z1)	439
8 	ACCORD QUINTET (SOHC)	1602	90	EP	1981		77			93009900	(ACCORD)	428.9
		1602	90	EP	1981		77					

◀ = Lado izquierdo - Left side - Cote gauche

▶ = Lado derecho - Right side - Cote droit